



Configuring the remote control:

In order for the remote to transmit the correct signals to control the TV, the remote must be programmed with a three-digit code corresponding to the type of TV in use.

To do this proceed as follows:

- Identify the make of the TV; eg Sony, Magnavox etc.
- Find the TV make listed in the TV brand code tables in the next section.
- Simultaneously press and hold the TV and OK buttons on the remote. After approximately two seconds, the TV button will light.
- Release the TV and OK buttons. The TV button remains illuminated.
- Enter the three-digit brand code according to the make of the TV that is being controlled. As each of the digits are entered, the TV button will briefly flash off and on again. When the third digit has been entered, the TV button will go out. If a TV brand code has been entered that the remote does not recognize, the TV button will flash rapidly for a second and remain illuminated. If this happens: re-enter the correct TV brand code.
- Verify that the remote control works with the TV.

Most TV makes have more than one brand code listed in the brand code table – if this is the case try all brand codes that are listed for that make until a suitable match is found. If no brand code is listed for the TV, try brand codes for Philips and NEC TVs.

If no brand code works for your TV, please contact your service provider who may be able to help.

Controlling a TV:

To control the TV press the TV button on the remote control. The TV mode-select button will light for one second to indicate that the mode has been set.

When any valid function button on the remote is pressed, the TV button will light to indicate that a command is being transmitted in TV mode.

