


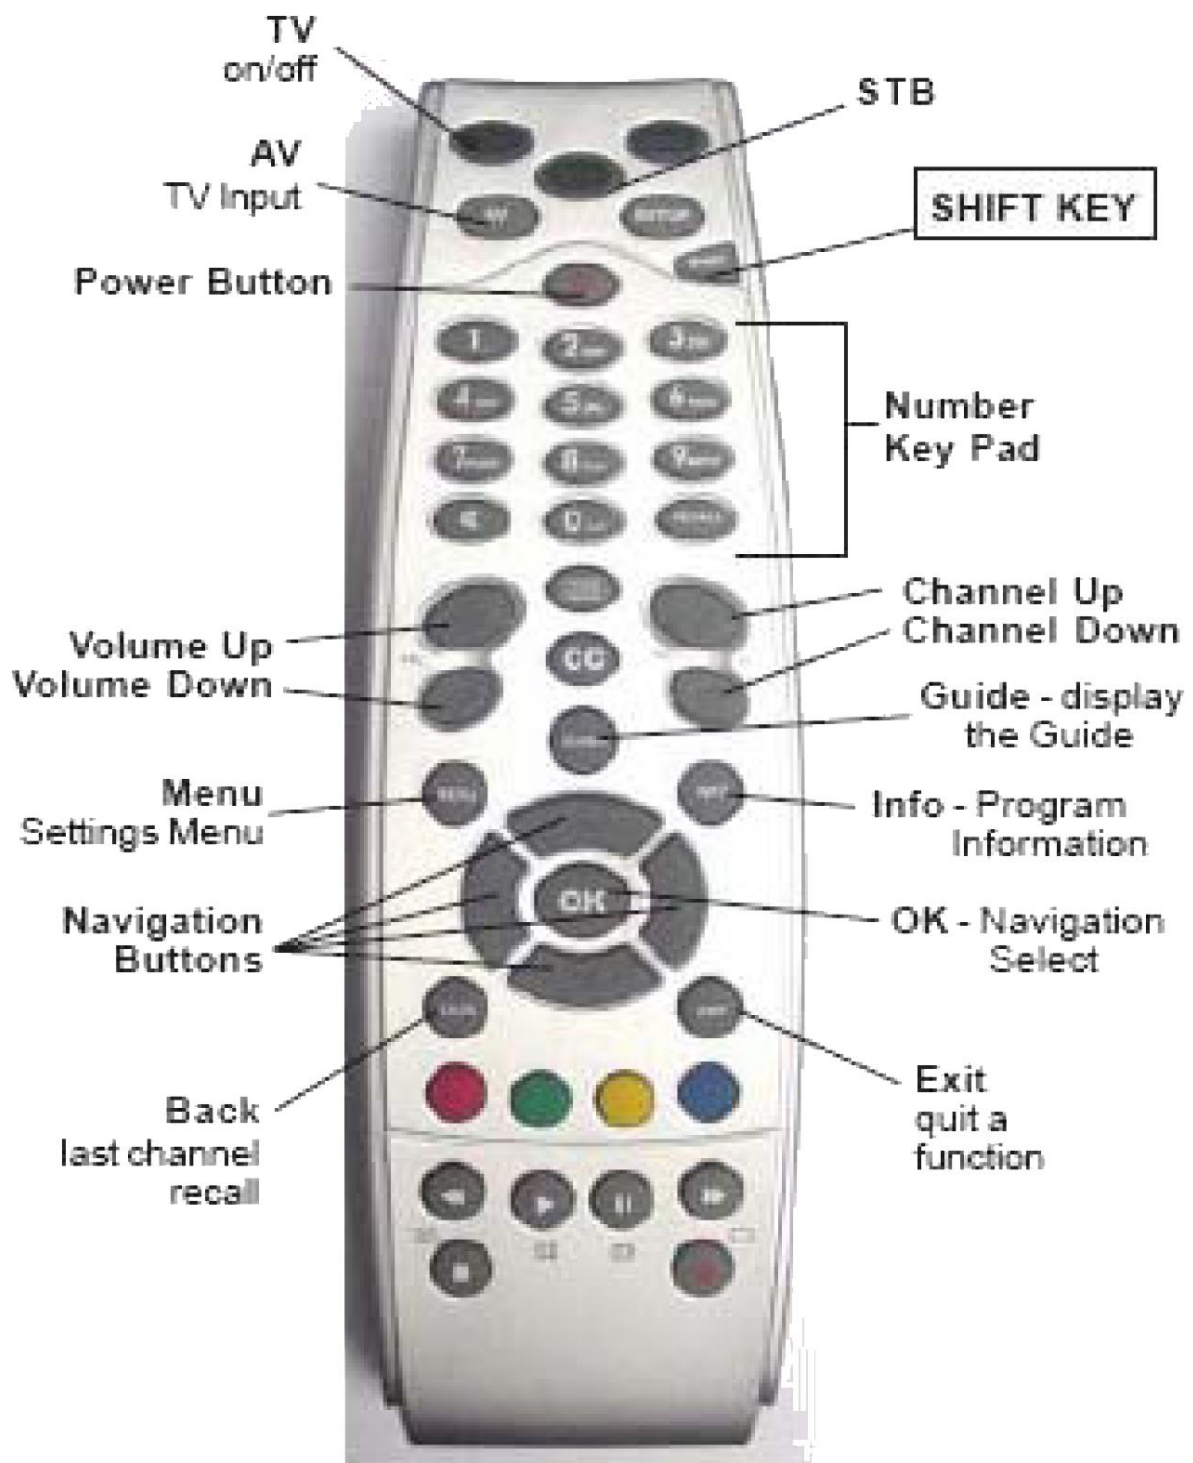

To search for your television code:

- 1. Switch your television on (not in standby mode).**
 - 2. Press the TV key on the FOCUS 3-MODE.**
 - 3. Press and hold down SHIFT key until the red light blinks twice (the red light will blink once then twice).**
 - 4. Press 9 9 1. The red light will blink twice.**
 - 5. Next, press a function. ***
 - 6. Aim the FOCUS 3-MODE at your Television. Now press PROG+ over and over, in order to scan through the codes available in the memory. You may have to press this key many times (up to 150 times) so please be patient. If you skip past a code, you can go to the previous code(s) by pressing the PROG-key. Remember to keep pointing the FOCUS 3-MODE at your Television while pressing this key. ****
 - 7. As soon as you have found an appropriate code, press SHIFT key to store the code.**
- (*) You can sample all functions (0, 1,2 3, Power, Volume Up, Play Stop and Mute), the last function that was sampled before PROG up/PROG down will be the designated function to send for each PROG up/PROG down key press. If no key is pressed before PROG up/PROG down then the default function will be power.
- (**) In each code you can test the following functions: 0, 1,2 3, Power, Volume Up, Play Stop and Mute. After sampling these functions you can continue the search with the previous (PROG down) or next (PROG up) code which will send the function that was originally pressed after 991.
- Most TV's do not switch on pressing the POWER key. Please try pressing a "number" key or the "TV-text off" key to switch your TV back on. -If you cannot control your Television properly, please continue the Search Method, you may be using the wrong Code. -To search for the code for another device follow the instructions above only press the appropriate device key instead of TV during step 2. -If the original remote control of your Video recorder or DVD player does not have a POWER key, press PLAY instead of POWER during step 5.



Please Note: The remote control buttons are highly sensitive and while you may select the button only once, it may respond as if you hit it multiple times.