



PROGRAMING YOUR REMOTE FOR POWER & VOLUME

CODE SEARCH METHOD

Press and release the TV button

Press and hold the RCU SETUP until the TV button blinks twice

Enter in 9 9 1 and the TV button will blink twice

Aim the remote at the TV and press and release the POWER button

Press and release the CH + or CH - until the TV turns off

Press the POWER button to turn the TV on

Press the RCU SETUP button to store the code for the TV. The TV button will blink twice. The remote is now ready to operate the TV.

VOLUME (USE WITH CODE SEARCH METHOD)

Press the TV button.

Press and hold the SETUP button until the TV button blinks TWICE. Enter in 9-9-3 .

Press and release the TV button and wait until it blinks twice

Once these steps have been completed, you should be able to control the volume and the mute regardless of what "mode" you are in. (i.e. TV, STB)

LEARNING METHOD

This means that you can transfer the information from the FACTORY ISSUED remote to the ADB remote. (power, volume, etc.) It bypasses having to do the code search method.

Press the RCU SETUP until the last selected mode button blinks twice. (TV, DVD, etc.).

Enter in 9-7-5 and press the TV button.

Press the button you wish to program (i.e. POWER) on the ADB remote.

Place the ADB remote and the ORIGINAL remote head-to-head about 2 inches apart.

Press and hold the SAME button (POWER) on the ORIGINAL remote.

The ADB remote TV button will blink rapidly and turn off. Keep holding the button on the ORIGINAL remote until the TV button on the ADB remote blinks twice.

If the learning failed, the TV button will emit one long blink.

Device Selection
Send commands to TV, audio, DVD, auxiliary device or set top box

DVR List
For future use

Menu
Displays Menu Bar

Arrow Buttons
Move highlight in system screens

Guide
Displays Guide

DAY - / DAY +
Jumps Guide 1 day ahead or back

Function Buttons
Reserved

Vol +/-
Adjust volume

Mute
Toggle audio on or off

Number Pad
Enter a channel number or PIN

Power
Turn a selected device on or off

Playback Controls
Control playback of DVD, PVR or VOD

Record
Begin PVR recording

Info
Display the Info Bar

OK
Enter a choice you have made

Exit
Close any screen and return to TV

PG +/-
Jump Guide 1 page up or down

CH +/-
Change the channel

VOD
For future use

LAST
Return to previous channel

CC
Toggles closed captions on or off

